

## Configuring User Login/Logout Alarm

(Please note that this feature is compatible with the latest firmware version v8.07 and above)

Follow the steps below to configure the **User Login/Logout** alarm on your WTI unit:

- Login to the WTI unit using CLI and issue the /ac command to access the Alarm Configuration menu.
- Once in the configuration menu, select the option for **User Login/Logout** and enable the alarm.
- Set **Monitor Cell Only** to **Off** if you want to monitor all logins via USB, serial, Ethernet, Cell, SSH and Telnet, or **On** to monitor only cell logins.
- The alarm will trigger notifications through **SNMP, Syslog, Email, or Slack** when a user logs in or out of the WTI unit.

```
USER LOGIN/LOGOUT:
1. Trigger Enable:           On
2. Resend Delay:            -----
3. Notify Upon Clear:       -----
4. Email Message:           On
  41. Address 1:             On
     (undefined)
  42. Address 2:             On
     (undefined)
  43. Address 3:             On
     (undefined)
  44. Subject:
     Alarm: User Login/Logout
5. Syslog Facility:          Local_0
6. Syslog Level:             Information
7. Monitor Cell Only:        On
```